



## **Sullair 185 CFM Compressor Safety**

### **\*Read and understand operators manual before use\***

1. Never start the compressor unless it is safe to do so.
2. Do not operate the air compressor with a known unsafe condition.
3. Do not use air pressures higher than 30 psig for cleaning purposes, and then only with effective chip guarding and personal protective equipment.
4. Do not engage in horseplay with air hoses as death or serious injury may result.
5. Do not remove radiator filler cap until the coolant temperature is below its boiling point. Then loosen cap slowly to its stop to relieve any excess pressure and make sure coolant is not boiling before removing cap completely. Remove radiator filler cap only when cool enough to touch with a bare hand.
6. Do not operate compressor under low overhanging leaves or permit such leaves to contact hot exhaust system surfaces when operating the compressor in forested areas.
7. Keep hands, arms and other parts of the body and also clothing away from belts, pulleys and other moving parts.
8. Do not attempt to operate the compressor with the fan or other guards removed.
9. Wear snug-fitting clothing and confine long hair when working around this compressor, especially when exposed to hot or moving parts inside the enclosure.
10. Keep all parts of the body away from all points of air discharge and away from hot exhaust gases.
11. Wear personal protective equipment including gloves and head covering when working in, on or around the compressor.
12. Operate the compressor only in open or well ventilated areas.