



## JLG Towable Boom Lift Safe Operating

1. Always read the Operators manual supplied with your specific unit before using.
2. Do not operate or raise the platform while on trucks, trailers, railway cars, floating vessels, scaffolds or other equipment unless approved in writing by JLG.
3. Be sure that the ground conditions are able to support the maximum load shown on the decals located on the machine.
4. Be sure enable trigger and all other safety devices are working properly.
5. Avoid any buildup of debris on the platform floor. Keep mud, oil, grease, and other slippery substances from footway and platform floor.
6. Never slam a control switch or lever through neutral to an opposite direction. Always return switch to neutral and stop before moving the switch to the next function. Operate controls with slow and even pressure.
7. Hydraulic cylinders should never be fully extended for long periods of time.
8. Do not allow personnel to tamper with or operate the machine from the ground with personnel in the platform, except in an emergency.
9. Supplies or tools which extend outside the platform are prohibited unless approved by JLG.
10. Do not place boom or platform against any structure to steady the platform or to support the structure.
11. Before operating the machine, make sure all gates are closed and fastened in their proper position. During operation, occupants in the platform must wear full body harness with a lanyard attached to an authorized lanyard anchorage point.



**Tool RENTALS** Ltd.

## JLG Towable Boom Lift Safe Operating

12. Do not climb on platform rails. Never use ladders, boxes, steps, planks, or similar items on the platform for additional reach.
13. Use extreme caution when entering or leaving the platform. Be sure that the boom is telescoped out and fully lowered. Maintain a "3 point contact" when entering or exiting.
14. Maintain safe distance from electrical lines, apparatus, or any energized parts.
15. Do not exceed allowable side slope and grade while operating.
16. Do not elevate platform while on a soft surface.
17. Never exceed the maximum platform capacity.
18. Do not increase platform size with unauthorized platform extensions or attachments.
19. Check work area for clearances overhead, on sides, and bottom of platform when lifting or lowering platform, and driving.
20. Never allow personnel in platform while towing, lifting or hauling machine.