

SAFETY PRECAUTIONS



READ THE MANUAL (Mandatory)

Read all safety and operating instructions before anyone operates your PowerMate® Unit. Use the PowerMate® unit only as described in this manual.

Retain all safety and operating instructions for future reference. Ensure they are readily available.

Heed all warnings in the safety and operating instructions.

Follow all installation, operation, service, and safety instructions.

Operator must have received approved training on the PowerMate® unit to be used. Training shall include theory, practice, and testing.

Never allow unqualified or un-authorized personnel to operate the equipment.

Operator must be familiar with normal operating practices and procedures. Whenever there is and doubt as to safety, the operator should stop the operation and not proceed until safe conditions are restored.

Operator is responsible for maintaining proficiency on PowerMate® equipment. Familiarity with instructions, safety procedures, maintenance practices, controls, operation, loading, are required at all times.



WARNING: Only trained personnel shall operate PowerMate® equipment. Failure to comply may result in possible severe injury to the operator and/or others, and damage and/or loss of property.

Wear safety shoes. Keep hair, loose clothing, fingers and all parts of the body away from pinch points and moving/rotating parts. Use equipment handles and controls for manoeuvring and operation.

Operator must have good hearing and vision (with or without correction) and must have good depth perception.

Operator must not be afflicted with any health condition(s) that might cause loss of control or ability.

Do not operate the equipment when using alcohol or taking medication that will affect your physical performance or judgement.

Do not eat or drink during the operation of PowerMate® equipment.

Stay alert when operating PowerMate® equipment.

No horseplay or practical jokes when operating the equipment.

Do not lift people and never ride on the PowerMate® Unit.

Do not abuse the equipment. Use PowerMate® equipment only for their intended use.



SAFETY INSPECTION

WARNING: Do not use PowerMate® equipment if it is damaged. Check for corrosion. Failure to do so may result in catastrophic failure, which may lead to injury, damage or loss of property, and loss of life.

Inspect the PowerMate® unit (see maintenance section) prior to using to ensure the operation can be safely completed. Insure all components of the unit are secure and functioning.

Do not use accessories or attachments not recommended by the manufacturer, as this may increase risk of damage and cause hazards.

Use only PowerMate® accessories best suited for the application ie: Strapbar Attachment for box type loads, Cylinder attachment for cylindrical loads, etc.

Insure that the PowerMate® unit is charged and ready for the operation.



ENVIRONMENT SAFETY

CAUTION: Barriers, warning signs, designated walkways or other safeguards must be provided where pedestrians are exposed to the risk of collision.

Plan your work. Make a plan of action from picking up the load to the point where the load is delivered. Check for doorway size, pathway surfaces, ceiling heights, tight corners, stair step size and integrity, turn radius considerations, etc.. Always use the recommended number of operators for a load.

Check the work site. Inspect the area to be traversed with the PowerMate® unit. Avoid debris, rough surfaces, pot holes, bumps, steep grades, etc. Avoid spills of any kind, slippery surfaces, soft ground, and standing water. Observe any condition that may cause loss of control of the PowerMate® unit leading to injury and/or property damage.

Ensure planned route for PowerMate® operation is clear of obstacles and uninvolved personnel. When visibility is obstructed use spotter person for direction instruction and/or clear path of obstacles and un-involved personnel.

Do Not Place the PowerMate® Unit on an unstable surface. Supporting surface must be capable of carrying the loaded PowerMate® Unit with Operator(s). Check the condition of stairs and the edges of loading docks and vehicle beds. When moving on or off a vehicle, be prepared for movement in the vehicle suspension system.

Do not use PowerMate® equipment in an enclosed space where oxygen, flammable, explosive or toxic vapours are present and/or are given off by oil base paint, paint thinner, some mothproofing substances, or in an area where flammable dust is present.



LOADING SAFETY

CAUTION: Never lift a load that is over the rated capacity of the PowerMate® unit. Estimate the weight and center of gravity position of the load and refer to the unit Load Capacity Chart to ensure the load is within the loading envelope. The capacity may be limited by the weight and strength of the operator(s). Do not operate with a load that is beyond the operator's physical ability.

Do not attempt to increase the load capacity of the equipment by the use of chains, rope, or other means of securing the equipment to the bed or bodies of vehicles, handrails, wall brackets, etc..

Operators shall determine the balance of unfamiliar loads prior moving the load. Work performed in a balanced condition is done easier and safer. New operators should gain practice experience with lighter loads of approximately 250 lbs. with a medium center of gravity before progressing to heavier loads. Do not raise or lower the load too far past the balance point. Jog the equipment control switches so as not to transfer the load weight too quickly. Training is mandatory!

Ensure the load is not damaged, properly packaged, no loose items such as tools used in packaging the load and sharp items (such as nails) projecting from the load.

Protect the PowerMate® strapping material from sharp edges to prevent strap failure. Always inspect straps prior to use. Insure the strapping latching mechanism is fully engaged.

Verify load secureness at the beginning of use, and prior to climbing or descending with the load. Check for any loose items or load shifting.

Never unstrap a load with the PowerMate® unit in an open (extended) condition. The unit will fall over backwards if the wheels are not in contact with a stable surface when the unit is unloaded.

Do not load the PowerMate® unit with a load center of gravity that is outside the side to side limits of the unit wheels.



SAFETY IN MOTION

CAUTION: When transiting a surface, avoid high speed turns that may cause the load and PowerMate® unit to tip. Remember that the load must be secure to the PowerMate® unit to ensure the load cannot shift.

When transiting the unit without a load, ensure the load strapping devices are secure, not dangling, to prevent a trip hazard and prevent entanglement in the PowerMate® moving parts.

Always keep your attention in the direction you are moving, monitoring clearances above, below, and each side of the PowerMate® and load. When visibility is obstructed use spotter person for directional instruction and/or clear path of obstacles and un-involved personnel.



SAFETY IN MOTION continued

Stay alert. Should something break, loosen, or malfunction, on your machine, stop work and seek qualified assistance to correct the condition. When going down a ramp or incline, always walk ahead of the machine and use the open/close controls to engage the rubber guard (foot) with the ground to act as a brake. Do not allow the loaded PowerMate® to attain an un-controllable speed. When moving a PowerMate® unit down a stair without a load, always push the wheels off the step before lowering the wheels to the next step.

Do not compress the top urethane bumper when the machine is under load.

BATTERY SAFETY



Lead-acid batteries contain hydrogen-oxygen gases that can be explosive and sulphuric acid that can cause severe burns. To help avoid risk of danger and injury, observe these precautions when handling or working with a lead-acid battery.



Wear ANSI approved safety glasses or goggles and a face shield. **Wear** proper clothing to protect hands, and body. Wear appropriate rubber gloves and apron.



Never lean over a battery when testing or charging. Cigarettes, flames or sparks, could cause a battery to explode. Keep all ignition sources away from battery. **Do not** strike the sides of a battery with any spark producing item. Make sure work area is well-ventilated.

Never touch both battery terminals with bare hands at the same time. **Remove** rings, watches and dangling jewelry when working with batteries. The metal in the jewelry can cause a shock and burns if contacted with the battery terminals.

Only use insulated/non-conducting tools when making connections on a battery. Never lay tools or other parts on top of a battery.



Because the batteries used in L P International products are of the sealed type, the battery should be replaced if there is evidence of spillage. If there is spilled sulphuric acid present, neutralize with baking soda. **Never** remove vent caps on a sealed battery. In the event of an accident, flush with water and call a physician immediately. If venting gas is significantly inhaled, seek immediate medical attention.

Never store batteries with explosives, flammable materials, chemicals, or food.

Protect batteries from crushing, punctures and shorting.

Do not charge or use booster cables or adjust battery connections without proper instructions and training.

Keep batteries out of reach of children.

Do not accumulate used batteries. Dispose used batteries in accordance with local environmental laws.

CHARGING SAFETY INSTRUCTIONS



Battery Charger

Before using the battery charger, read all instructions and cautionary markings on the battery charger, battery, and product using the battery.

DANGER: Electrical equipment may be hazardous if misused. Operation of this product, and the device it is used on, must always be done with complete knowledge of the product instructions and safety information. Failure to do so may cause serious injury.



DANGER: RISK OF ELECTRICAL SHOCK, BURNS, OR FIRE -The battery charger must be used as supplied. Do not use charger units if the input or output cord is cut or frayed, or damaged in any way. Never replace, splice, or repair cables or connectors supplied with the charger. Do not use the charger if case is damaged in any way. Do not open the charger case for any reason. There are no user serviceable parts. Always be sure that the charger is disconnected from the power source and battery being charged before handling.

NOTICE

Your AC cord came equipped with a three-wire grounding plug (a plug that has a third grounding pin). This plug will only fit only a grounded AC outlet. If you are unable to insert the plug into an outlet because the outlet is not grounded contact a licensed electrician to replace the outlet with a properly grounded outlet. Do not defeat the purpose of the grounding plug. Pay particular attention to convenience of receptacles.

If an extension cord is necessary, use a cord with a current rating at least equal to that of the charger. Cords rated for less amperage than the charger may overheat. Ensure the pins of the extension cord plug are the same number, size, shape, as those on the charger. Ensure the extension cord is wired properly and in good condition.



CAUTION: Position the charger and charger cords so that it is not tripped over, pulled, or placed in contact with heated surfaces. Route charger cords so that they are not likely to be walked on or pinched by items placed upon or against them. Protect the charger from dampness or wet weather, such as rain, snow, and so on. Keep charger away from sources of liquids, such as drinks, washbasins, bathtubs, shower stalls, solvents, flowing water, and so on. Do not allow the charger, or any of its cords and connectors lie in standing water such as a puddle.

CAUTION: Charge only properly maintained and rechargeable lead acid batteries of the same voltage rating that is printed on the charger. Other battery types or voltages, damaged batteries, or improperly maintained batteries may burst or emit dangerous gases.

CAUTION: Only use the supplied charger on PowerMate® products. The charger units supplied by L P International are internally protected against battery polarity reversal and overload. This limits potential damage to the charger. However, the charger does not protect against shorting or overload of external wiring or of the battery being charged. Integrity of the PowerMate® unit wiring should be monitored during routine inspections.

CHARGING SAFETY INSTRUCTIONS continued



CAUTION: Do not operate the PowerMate® unit while connected to the charger.



Do not overload wall outlets or extension cords, as this can result in a risk of fire or electrical shock.

Do not operate charger if it has received a sharp blow, been dropped, or otherwise damaged in anyway.

To reduce risk of electrical shock, unplug the charger from the outlet before attempting maintenance or cleaning.

Disconnect the power plug by pulling the plug, not the cord.

Do not handle the plug with wet hands.

Unplug the charger when not in use.




BATTERY CHARGER
PN 400211B

12V IN-VEHICLE CHARGER



WARNING: The In-vehicle charger cannot protect against vehicle damage caused by faults in the wiring from the vehicle battery to the charger or faults in any other portion of the vehicle wiring harness. The user must ensure that the wiring to the charger adheres to the same vehicle wiring standards and safety precautions required for all vehicle wiring.

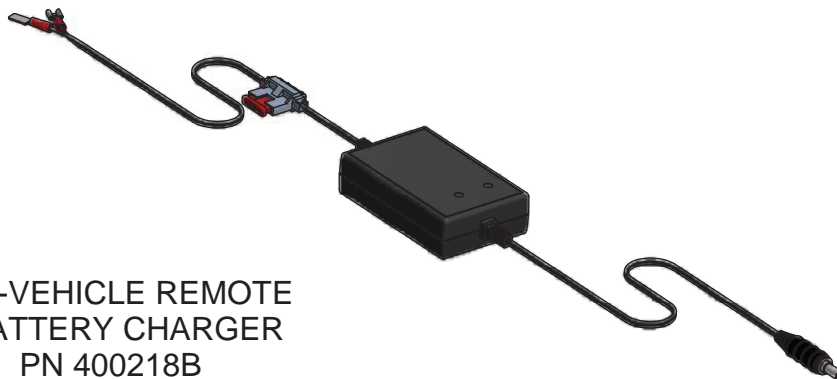

IN-VEHICLE REMOTE
BATTERY CHARGER
PN 400218B