



Tool RENTALS Ltd.

Genie AWP Safe Operating

*******Read and Understand Operators Manual Before Use!*******

Only trained operators shall operate this lift

Before operating lift

- Perform a pre operation inspection and function test

-Inspect the workplace

-Use the machine only as intended

Maintain safe distances from electrical power lines

Do not raise the platform unless the base is level, all four outriggers are properly installed and the leveling jacks firmly contact the floor

Do not adjust or remove the outriggers while the platform is raised

Do not move the machine while the platform is raised

Do not place or attach overhanging loads to any part of the machine

Do not push off or pull toward any object outside the platform

Maximum allowable side force is 50 lbs

Do not operate the machine near drop offs, holes, bumps, unstable or slippery surfaces or other possible hazardous conditions

Do not alter or disable machine components

Do not push the Genie AWP from the platform side of the machine

Do not use the machine on a moving or mobile surface or vehicle

Do not operate the machine in strong or gusty winds

Do not raise the platform when wind speeds exceed 28mph

Do not exceed Maximum platform capacity of 350 lbs

Maximum occupancy is 1 person

Do not sit, stand or climb on platform guard rails

Always disconnect and remove battery pack before tipping machine to load, keep battery pack upright