



Landa Pressure Washer

Safety precautions and Operating Instructions

Gas and electric

Safety:

1. Use in a well ventilated area. Exhaust contains poisonous carbon monoxide gas; exposure may cause loss of consciousness which may lead to death.
2. Flammable liquids can create fumes which can ignite causing property damage or severe injury. Do not add fuel when the product is operating, wait 2 minutes before refueling.
3. High pressure stream of fluid that this equipment can produce can pierce skin and its underlying tissues, leading to serious injury and possible amputation.
4. Wear proper safety equipment. High pressure spray can cause paint chips or other particles to become airborne and fly at high speeds. To avoid injuries, eye protection must be worn.

Operating Instructions:

1. Attach a garden hose to inlet connector (5/8" min)
2. Attach a pressure hose to machine and wand, lock coupler securely into place by pulling back coupler collar and inserting into nipple then push collar forward to lock in place.
3. Pull wand coupler back and insert pressure nozzle into coupler and secure by pushing collar forward.
4. Turn on faucet and pull trigger on spray gun allowing water to flow until all air has discharged from system.
5. Turn engine to ON position, make sure fuel valve is ON (to the right) and turn choke on (to the left) when engine is cold.
6. While squeezing the trigger to relieve pressure pull the rope to start.
7. When engine starts, turn the choke to OFF position (to the right).
8. **DO NOT** allow machine to run more than 1 minute without spraying water or damage to the pump will occur.